## Microstructural Analysis of 3D-Printed Alloy 718.

G. Bertali<sup>1</sup>, Y. Wang<sup>1</sup>, J. J. H. Lim<sup>1</sup>, F. Scenini<sup>1</sup>, C.J. Long<sup>2</sup>, P.D. Freyer<sup>3</sup>, and M. G. Burke<sup>1</sup>

- <sup>1</sup> Material Performance Centre, The University of Manchester, Manchester (UK)
- <sup>2</sup> Westinghouse Electric Company LLC, Hopkins, SC 29061 (USA)

Three-dimensional printing (3DP), as an emerging additive manufacturing process in the last decade, is a promising technique for high-speed low-cost fabrication of complex parts compared with traditional methods. Although it is possible to 3D print complex alloys such as Ni-Cr-Fe alloys and stainless steels, the effect of this manufacturing process on the material microstructure remains a topic of research.

The microstructural complexity of Ni-Cr-Fe-Nb-Ti-Al alloy (Alloy 718) especially in terms of second phase precipitation is well-known and has been extensively characterized and studied in the past [1-3]. The main precipitates that have been identified in Alloy 718 are  $\gamma$ '' (Ni<sub>3</sub>(Nb,Ti)),  $\delta$  (Ni<sub>3</sub>Nb),  $\gamma$ ' (Ni<sub>3</sub>(Al,Ti)), MC, M<sub>23</sub>C<sub>6</sub>, M<sub>7</sub>C<sub>3</sub>, M<sub>6</sub>C and Laves. 3D-printed Alloy 718 microstructure is expected to be characterized by the presence of the same precipitates. However, the extent and distributions of these precipitates might be different from the conventionally-produced wrought alloy. These possible microstructural variations may affect macroscopic properties of the alloy such as elevated temperature resistance, creep resistance and strength. Therefore, a detailed microstructural characterization of the 3D printed Alloy 718 is needed in order to assess any differences from the conventionally-produced alloy.

In this study, a combination of field-emission gun (FEG) scanning electron microscopy (SEM), bright-field (BF) and dark-field (DF) transmission electron microscopy (TEM), and analytical electron microscopy (AEM) techniques have been used to study the microstructure developed in 3D-printed Alloy 718 with emphasis on the type and extent of precipitation.

The as-polished Alloy 718 was examined in a Zeiss MERLIN FEG-SEM with a GEMINI II column using both secondary electron (SE) and backscattered electron (BSE) modes. The microstructure was characterized by a layered and elongated grain structure (Fig. 1(a)) and by numerous subgrains (Fig. 1(b)). High resolution energy-selected backscattered electron analysis highlighted three different precipitate morphologies: coarse globular and plate-like intergranular brightly-imaging precipitates and fine acicular intragranular brightly-imaging precipitates. TEM analysis confirmed that the intragranular precipitates were  $\gamma$ " with a size of ~100 nm (Fig. 2). Discrete needle-like  $\delta$  precipitates preferentially precipitated at high-angle grain boundaries. High resolution scanning transmission electron microscope (STEM) energy dispersive x-ray (EDX) microanalysis, using the FEI Titan G2 80-200 aberration corrected S/TEM equipped with super EDX, revealed marked micro-chemical variations in the fine precipitates. The disc-shaped  $\gamma$ " was composed of Ni, Nb and Ti, with a small amount of Al, and served as a nucleation site for subsequent precipitation of very fine  $\gamma$ " precipitates, which were enriched in Al (Fig. 4). These results will be discussed and compared with conventionally thermally-treated Alloy 718.

## References:

- [1] M.G. Burke *et al.* J. de Physique (1989) p. C8 395-400.
- [2] Moukrane Dehmas et al. in Advances in Materials Science and Engineering (2011).
- [3] D.F. Paulonis et al. in Trans. ASM (1969) p. 611.

<sup>&</sup>lt;sup>3</sup> Westinghouse Electric Company LLC, Pittsburgh, PA 15235 (USA)



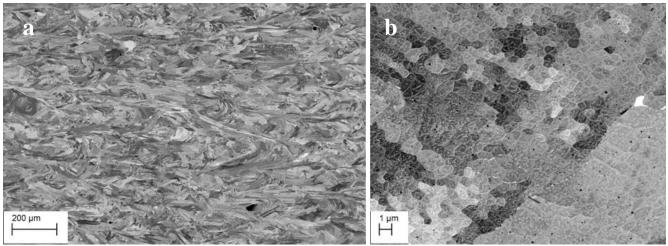



Fig. 1: (a,b) BSE images of the 3D-printed Alloy 718 microstructure and the subgrain structure.

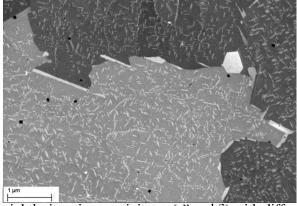

**Fig. 2:** BSE image showing the brightly-imaging precipitates ( $\gamma$ " and  $\delta$ ) with different morphologies.

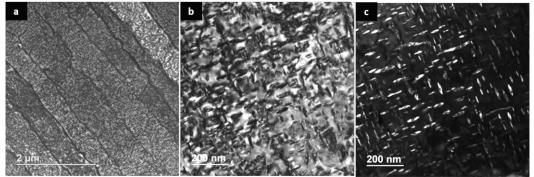

**Fig. 3:** TEM images of (a) the subgrain structure; (b) [001] BF and (c) DF images of the intragranular  $\gamma$ ".

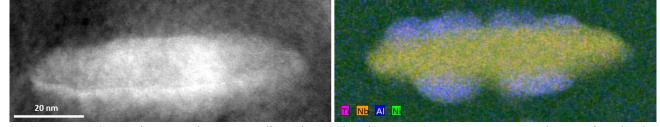

**Fig. 4:** HAADF STEM image and corresponding Titan "ChemiSTEM" SDD EDX spectrum images for Ti, Nb, Al, Ni of a coarse  $\gamma$ " precipitate with smaller discrete  $\gamma$ ' precipitates that have nucleated at the  $\gamma$ "/matrix interface.